

Palintest

Water Analysis Technologies

Cyanuric Acid

Photometric test for Cyanuric Acid in swimming pool and spa water

COLOUR CHANGE

Clear to cloudy

RANGE:

0 - 150 mg/L CyA

TECHNICAL RESOURCE:

Cyanuric Acid Test Method, Technical Information

NOTES:

When test result is above 100 mg/L, it is recommended that for the most accurate result, the test is repeated using a x10 dilution of the sample

01




Fill to the 10 mL line with sample.

02



Use this to "blank" the instrument. Place in cell holder and press Blank.

03

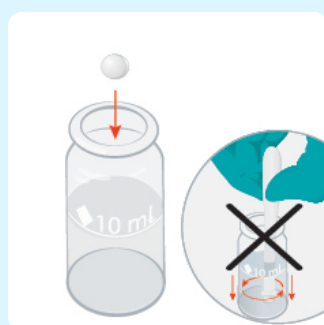

Prepare sample by adding a Cyanuric Acid tablet, but, do not crush.

04



Allow 2 minutes for tablet to disintegrate.

05



Crush any remaining particles and stir.

06



Place the tube in the cell holder and press Measure to obtain concentration of Cyanuric Acid.