

Palintest

Water Analysis Technologies

Molybdate LR

Photometric test for Molybdate LR

COLOUR CHANGE

Colourless to Yellow

RANGE:

0 - 20 mg/L MoO_4

TECHNICAL RESOURCE:

Molybdate LR Test Method, Technical Information

01




Fill to the 10 mL line with sample.

02




Use this to "blank" the instrument. Place in cell holder and press Blank.

03

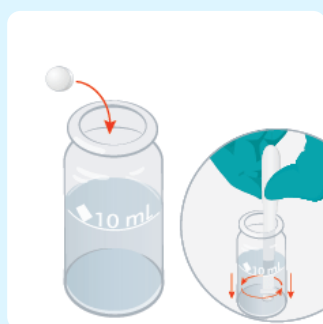

Prepare sample by adding a Molybdate LR No1 tablet and crush and stir.

04

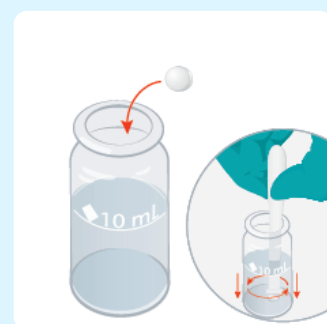

Then, add a Molybdate LR No2 tablet and crush and stir.

05



Place in the cell holder and press Measure.

06



Allow timer to count down 2 minutes. The concentration of Molybdate will then be displayed.